


# U.S. Games

## Super Duper Casino SDC pinouts

Left  
Front

Light's Are Ground Switch

6.3v .25amp UB GE259

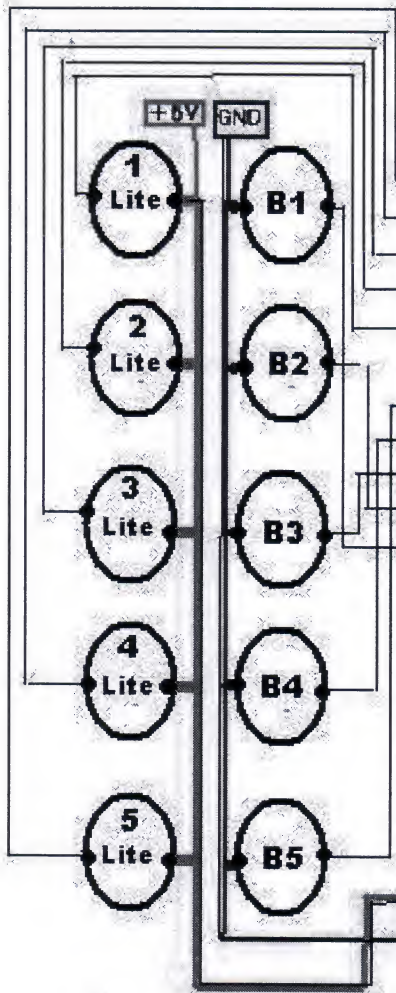

+5V  
right  
Front

PARTS SIDE	
1	light 5
2	light 4
3	light 3
4	light 2
5	light 1
6	SPEAKER -
7	b 5
8	b 4
9	b 3
10	b 2
11	b 1
12	n/c
13	n/c
14	n/c
15	n/c
16	n/c
17	00W
18	volume
19	SPEAKER +
20	n/c
21	+5V
22	GND

Tide  
together

TEST switch  
hold on start  
Rom check to  
enter settings

SOLDERING SIDE	
A	n/c
B	n/c
C	n/c
D	n/c
E	n/c
F	SPEAKER -
H	n/c
J	TEST
K	n/c
L	n/c
M	n/c
N	video R
P	video B
R	video G
S	n/c
T	video Sync
U	volume
V	n/c
W	n/c
X	+12V
Y	+5V
Z	GND

Tide  
together

front  
vol